# **Voximal Web Configuration**

### Access

All the configuration is managed throw a web interface based on the FreePBX project. To access to the web interface, open the link

#### http://your\_server\_address/admin.

It's protected by a login (the first login after the installation will request you a password).



# Login

After installation there are 3 default login accounts, with differents access permissions

- **user** : access to Voximal configuration and reports.
- admin : user access and network configuration
- root : full access (full freePBX features).

Each login have a default password (requested after the package installation, or the image activation), you can be change them with the root account.



### **System Status**

The home page after login show you the system status.

- Host name of the server
- Summary : Main modules status
- Interpreter statistics
- Telephony statistics
- Uptime / Load average

	Settings V Apply Config					Logout	admin Langu
System Ov	verview	3		Tele	phony Statistics		0
Welcome to	ivr.ulex.fr		Telephony -	Trunks Reged	Trunks Offline	<ul> <li>Active Calls</li> </ul>	
Summary	Sysinfo updated 1 seconds ago						•
Telephony 🗸	Suctom Alorte		Uptime 👻				6.4
Database 🗸	No critical issues found		CPU 🗸				4.8
Interpreter V			Memory -				3.2
There are 10 had destinations	,		Dick -				
Change and the bad designations	A.I.		Disk •				1.0
Snow/	All		Network +				0
Interpreter S	Statistics	0	-		Untime		0
Sessions	Status			-	opune		~
Pending 0				Syst	tem Last Rebooted		
Peak 1				r day, r nou	n, 11 minutes, 55 seconds, aj	<b>j</b> 0	
Opened: 6 Error: 0 Refused:	0 Max Duration: 81s		Load Averages				
Average Co		0.10 1 Min	) ute	0.03 5 Minutes	0.01 15 Minutes		
Sessions	0	0.00		010	o minuto o	10 11110100	
Duration: 33.50 Response: 0	0.33 CAPS: 0.00						

### Main configuration steps

2024/06/01 00.50

To configure the Voximal IVR you have 4 steps to do :

- 1. Configure the VoIP telephony access (SIP accounts)
- 2. Create/edit a VoiceXML service (Create a VoiceXML service)
- 3. Create Voximal accounts (Voximal accounts)
- 4. Configure the relation between the DID and the VoiceXML service you want to use (Routes configuration)

**Note**: On each configuration page, don't forget to click on **[Submit]** button at the bottom page before changing page. If you don't click on **[Submit]** you'll lose all your changes.

**Note**: All changes are not directly configure on the server. After one change, you'll see a button **[Apply Config]** in menu. To activate the changes on server <u>you have to click on</u> **[Apply Config]**.

#### 1) Configure the telephony access

#### a) Use the test number and the PIN

If your server is connected to the internet you can use the free test access to place calls to your server. There is nothing to do. You should only check that the port 4569 is open from/to internet in UDP.

#### b) Connect a trunk SIP

Before you can make external calls or accept incoming calls from outside, you need to setup SIP Trunks. You can choose any VoIP Service providers. You can create a SIP trunk with an operator referenced in the page Voip Providers. You have to enter informations :

- A trunk name : a string to identify you accounts
- The peers details : enter all trunk informations (host, username, password, type)

```
host=myprovider.com
username=0033123456789
type=peer
```

• Register informations : enter registry informations like :

0033123456789:password@myprovider.com/33123456789

• Click on [submit] button (don't remember to apply your modifications)



#### c) Add an extension

After you setup your Voxibot, the first thing you do is to add extensions (connect a Phone). The integrated FreePbx allows you to add a couple of different Device types

- Generic SIP Device
- Generic IAX2 Device
- Generic DAHDi Device
- Other Custom Device

Among these types, SIP device is the most common and popular one.

You can give your extension any unique number, Display Name, password, whether allow this extension to accept inbound external calls or can make outbound external calls. can have voicemail or not etc.

#### 2) Create a VoiceXML service

You need to create VoiceXML service, by uploading it or writing it directly with the embedded VoiceXML/PHP editor. Select the application menu **Voximal**.

#### Uploading VoiceXML service

ctory	y:/var/ww	w / html / vxn	nl 🥒		Create Directory
File	ename	Type	Size (bytes)	Date Modified	Create File
me	essaging.tgz	TGZ File	3,072,973	Aug 19 2015 3:53 PM	
den	m o.tgz	TGZ File	137,915	Aug 17 2015 9:50 AM	
ver	rnai	<directory></directory>		Feb 8 2016 9:26 AM	
me	essaging	<directory></directory>		Oct 29 2015 2:36 PM	
app	p1	<directory></directory>		Jun 25 2015 5:56 PM	
can	mpaign	<directory></directory>		Apr 26 2016 4:58 PM	
tes	sts	<directory></directory>		Mar 9 2016 10:45 PM	
hel	lloworld	<directory></directory>		Apr 27 2016 10:07 AM	
hell	lloworld.vxm1	VXML File	536	Oct 14 2016 11:05 PM	
der	mo	<directory></directory>		Oct 10 2016 5:17 PM	

In page Applications/Voximal click on **Editor** tab. At the end of the page, you have the way to upload files :

- Click on **Browse** and select your files (.vxml, .php, ...).
- Then click on [Upload]. Your files will appear in list.

#### Create VoiceXML service with editor

You can update VoiceXML file (extension .vxml), by clicking on the filename. The file content will appear, and you'll be able to update it, and check the syntax.

The editor page allow to create folders and files, and edit them.

To create folders or files, click on right items on top right corner (Create Directory or Create File).

Then enter filename, and click [Create].

Connectivity ⊽ Reports ⊽ Settings ⊽ Apply Config	Logout: admin	Language V
Voximal Application          Accounts       Editor         Edition file: / belloworld yourd of the second		
<pre>identing inter fileDiversion="1.0"&gt; identify inter fileDiversion="2.0" xmlns="http://www.w3.org/2001/vxml" xml:lang="en-US"&gt; identify inter fileDiversion="2.0" xmlns="telephone.id"/&gt; identify inter fileDiversion="2.0" xmlns="telephone.identify"&gt; identify inter fileDiversion="2.0" xmlns="telephone.identify"&gt; identify inter fileDiversion="2.0" xmlns=</pre>		
K Save Back Check		>
The Vxml syntax is valid		
Version 1.0.121 18 Oct 10:10:36 The voice interaction		Support

### 3) Create a Voximal account

When your VoiceXML services is ready, you have to configure it in the server. To do it, add Voximal account. Select the **Voximal** menu item.

To create a Voximal Account, you have to define in minimum 2 required informations :

- 1. An application name, in field **Name**
- 2. The VoiceXML url of the service, in field **URL**. You can select a local one, in the list or writing a local or HTTP one.

There are several options :

- 1. **Max sessions** : you can define a specific limit, if you want lower maximum session than the license.
- 2. **Dial format** : you can define a specific dialout format for outgoing calls.
- 3. **Mark** : you can define a specific mark, that will appear in traces.
- 4. **Speech** : you can specify the use of the ASR. In case of using ASR server, the better way is to set **Automatic** choice.
- 5. **Max time** : you can set a maximum duration of call. If not setted or equals to 0, the duration is unlimited.
- 6. **Vxml parameter** : you can set a string to pass it to vxml script.
- 7. **Start delay** : you can set a time delay to start the service.

Accounts	Editor	
dd Applicatio	nc.	Add New Application
aa Approate		Campaign
he fields marked v	with * can not be left in blank.	Demo
		HelloWord
ame* 0		messaging-consult
ame		Saadur
RL* <sup>0</sup>	Select V	SiteVernal
		Tests
lax Sessions 🖤		Voximal_Access
ial Format 🛛		
lark <sup>1</sup>		
peech 🛛	Emulation No Yes Automatic	
lax time (s) 🕫		
ession parameter	.0	
	2022	
tart delay (ms) 🧐	2000	

#### 4) Number/Routes configuration

You have your DID number and SIP Trunk set up (with the test number, the called number will be 4568 : "VXML" in the dialpad). If you set up the inbound rules, you define when people call your DID number (for example 555-555-555) how your Voxiboy handle such call, normally you set up a Voximal Account (where you define the first VoiceXML document of your voice portal).

You can to define which application you want to use by default for all incoming calls. It's done by defining the **any DID/any CID** or **All DIDs** settings in **Connectivity/Numbers** page.

- 1. Select All DIDs item (on top right corner)
- 2. Leave empty Field **DID Number**
- 3. Select the application to use : Voximal Application
  - You can select an existing application (for example Voximal)
  - Or create a new one by clicking "Add new Voximal application"
- 4. Click on **[submit]** button.

Last update: 2016/10/25 installation\_guide:configuration:start https://wiki.voximal.com/doku.php?id=installation\_guide:configuration:start&rev=1477430618 21:23

Voximal Connectivity <b>v</b> Re	ports V Settings V Apply Config	Logout: admin
Id Incoming Doute		Add Incoming Rou
a incoming Route		All DIDs (toggle so
d Incoming Douto		User DIDs
a monting Route		General DIDs
		Unused DIDs
escription •:		any DID / any CID
D Number 😶		12345
		test / any CID
allerID Number 🤨		01 / any CID
D Priority Route		Echo Test
D'Honty Route		700 / any CID
otions		Goldorak 0034011413000 /
		HelloWorld
ert Info 🛛:		8965 / any CID
		Tests 00 / any CID
D name prefix *:		Voximal Demo
		33972538733 / a
		Voximal Test
eject Reverse Charges 🛂		00359/2538823 /
ause Before Answer <sup>1</sup>		
ivacy		
ivacy Manager 🛛:	No	
all Recording		
all Recording 0.	Allow	

# **Call Detail Record**

The CDR Reports allows you to view a report showing the telephone calls made from and received to your system. You can choose to view a complete history or calls, or to search by date, date range, number called, caller ID, etc.

anorta												
Call Detail Re	cord Search-											
	Order By		Search conditions									
Call Date	0	From	From: 01 October ▼ 2016 ▼ 00: 00 To: 31 October ▼ 2016 ▼ 23: 59 Not: Begins With:  Contains:  Ends With:  Exactly:							Extra options		
CallerID N	umber 0											
CallerID Name 0:			Not: Begins With:  Contains:  Ends With:  Exactly:							: CSV file		
Outbound	CallerID Numb	er 🖸:	Not:         Begins With:         © Contains:         Exactly:         Result limit :         100           Not:         Begins With:         © Contains:         Ends With:         Exactly:            Not:         Begins With:         © Contains:         Ends With:         Exactly:            Not:         Begins With:         © Contains:         © Ends With:         Exactly:            Not:         Begins With:         © Contains:         © Ends With:         Exactly:							Result limit : 100		
O DID 🛛												
Destination	<b>0</b> ;											
Destination	n CallerID Nam	0										
Userfield	0		Not: Begins With: Contains: Contains: Kenter Exactly:									
C Account C	ode 😯		Not: Begins With: Contains: Ends With: Exactly:									
Duration	Duration 0: Be			Between: And: Seconds								
Disposition	Disposition 0:		All Dispositions V Not:									
Newest Fin	st 🔻	Grou	ир Ву: Day		•		Search					
				Call Detail	Record - Se	earch Retu	rned 100 Cal	ls				
Call Date	Recording	System	CallerID	Outbound CallerID	DID	App	Destination	Disposition	Duration	Userfield	Account 🥩	
2016-10-18 00:21:13		1476742873.238	"Borja SIXTO " <11>	"Borja SIXTO " <11>		Dial	0170613300	ANSWERED	01:31			
2016-10-18		1476742106.222	"Borja SIXTO " <11>	"Borja SIXTO " <11>		Dial	0170613300	ANSWERED	00:38			
2016-10-18 00:02:35		1476741755.206	"Borja SIXTO " <11>	"Borja SIXTO " <11>		Dial	0170613300	ANSWERED	00:46			
2016-10-17 23:56:13		1476741373.190	"Borja SIXTO " <11>	"Borja SIXTO " <11>		Dial	0170613300	ANSWERED	00:46			

### Logs

The Asterisk Logfiles Module is an easy way to view portions of the Asterisk Log. However, this Module is only useful when you want to view a very recent event in the Asterisk Log.

9/10

You have similar Module for the Voximal log :



# Settings

The home page after login show you the system status.

- Host name of the server
- Summary : Main modules status
- Interpreter statistics
- Telephony statistics
- Uptime / Load average

# **Configuration files**

- /etc/voximald.conf (not modify this file)
- /etc/asterisk/voximal.conf (not modify directly this file)

Last update: 2016/10/25 installation\_guide:configuration:start https://wiki.voximal.com/doku.php?id=installation\_guide:configuration:start&rev=1477430618 21:23

From: https://wiki.voximal.com/ - Voximal documentation
Permanent link:
https://wiki.voximal.com/doku.php?id=installation\_guide:configuration:start&rev=1477430618
Last update: 2016/10/25 21:23